



The ultimate outdoor grilling experience.

Phone: 1 (888) 287-3333 ♦ Fax: 1 (877) 855-5373 ♦ #106-2480 Mt. Lehman Road, Abbotsford, BC V4X 2N3

Installation Instructions—JVS-VALVE75NG: Multi-purpose Natural Gas valve for JVS75

Package Contains: 1 JVS-VALVE75 w/ NG Orifice, 2 S/S Philips Screws, 1 Heat Settings Decal, 1 Black Plastic Control Knob.

Comes with Natural Gas (NG) orifice (#56) INSTALLED on the valve.

Instructions:

To Install:

1. Clean surface of control box and install sticker (See fig. A)
2. Screw threaded part of the valve into the end of the burner until the stainless-steel bracket lines up with screw holes. Do not use a wrench to tighten, **finger tight only**. Do not put pipe dope or gas Teflon tape on the threads that anchor the valve to the burner.
3. Install supplied Philips screws to fasten the bracket to the grill.
4. Install supplied heat settings decal above the valve on the side of the grill as shown in Fig. A.
5. Install black plastic control knob onto the valve.
6. See NOTE.

NOTE: The air shutter on the burner is set open to allow maximum air to the burner for clean combustion and best performance. You may need to make some adjustments by about 1/4". To see location of air shutter, See Fig. B. By doing this, you may stabilize the flame pattern on the burner depending on the environment you are in. In most cases the factory setting will be satisfactory for good results. The flame should be approximately the same height on the full length of the burner.

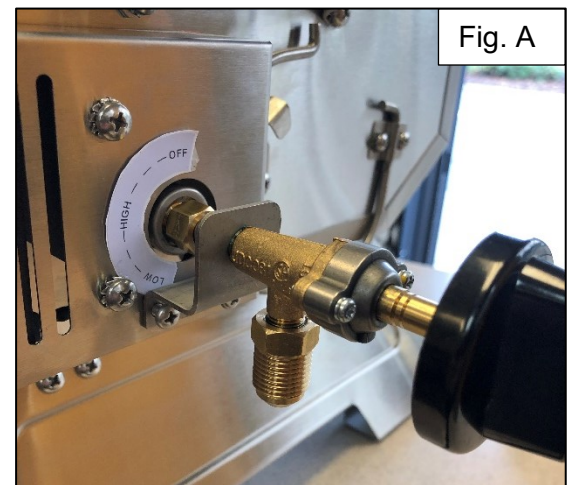 


Fig. A

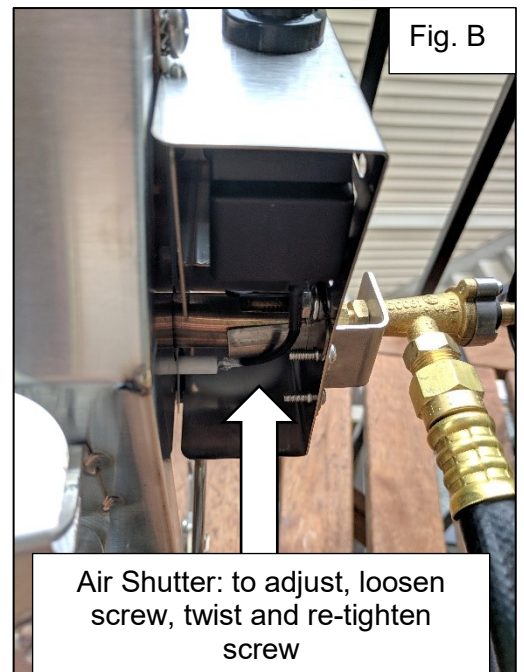 


Fig. B

Air Shutter: to adjust, loosen screw, twist and re-tighten screw